


NEOS SIDE ENTRY INSTALLATION INSTRUCTIONS

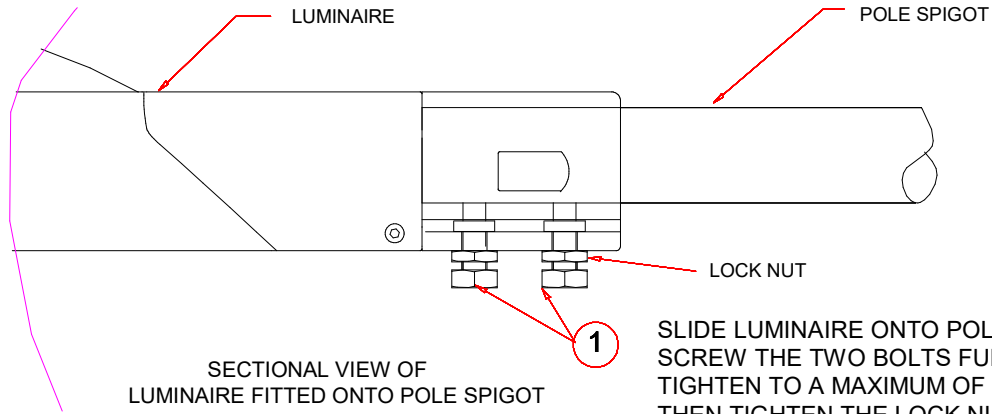

SLIDE LUMINAIRE ONTO POLE SPIGOT. SCREW THE TWO BOLTS FULLY IN & TIGHTEN TO A MAXIMUM OF 25Nm. THEN TIGHTEN THE LOCK NUTS.

FOR INSTALLATION OF THE SUPPLY CABLE & P.E. SWITCH.

